

Nikon Cameras

	D2Xs	D3 / D3X	D3s	D4	D4s	D40 / D40X	D50	D60	D70 / D70s	D80	D90	D200	D300	D300s	D600	D610	D700	D750	D800	D800E	D810	D3000	D3100	D3200	D3300	D5000	D5100	D5200	D5300	D7000	D7100	Df	Coolpix A	Coolpix P5000	Coolpix P5100	Coolpix P7700
--	------	----------	-----	----	-----	------------	-----	-----	------------	-----	-----	------	------	-------	------	------	------	------	------	-------	------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	----	-----------	---------------	---------------	---------------

Nissin Model

MG8000 Extreme	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
MF18	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
Di866 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
Di866	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
Di700	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	
Di700 A	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Air 1 Commander	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Di600	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Di622 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Di622	○	●	○	○	○	●	●	●	●	●	●	●	●	○	○	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
i40	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Di466	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	
Di28	●	●	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	

- Compatible Model
- Latest Firmware is Required
- FV Lock system does not work
- SD Mode not supported

Sony Cameras

Alpha 7	Alpha 7R	Alpha 7S	Alpha 7 II	Alpha 100	Alpha 200	Alpha 230	Alpha 290	Alpha 300	Alpha 330	Alpha 350	Alpha 380	Alpha 390	Alpha 450	Alpha 500	Alpha 550	Alpha 560	Alpha 580	Alpha 700	Alpha 850	Alpha 900	Alpha 3000	Alpha 6000	Alpha SLT A33	Alpha SLT A55V	Alpha SLT A57	Alpha SLT A58	Alpha SLT A65	Alpha SLT A77	Alpha SLT A77 II	Alpha SLT A99	NEX-6	NEX-7	RX1	RX10	RX100 II	HX60V
---------	----------	----------	------------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	------------	------------	---------------	----------------	---------------	---------------	---------------	---------------	------------------	---------------	-------	-------	-----	------	----------	-------

Nissin Model	Alpha 7	Alpha 7R	Alpha 7S	Alpha 7 II	Alpha 100	Alpha 200	Alpha 230	Alpha 290	Alpha 300	Alpha 330	Alpha 350	Alpha 380	Alpha 390	Alpha 450	Alpha 500	Alpha 550	Alpha 560	Alpha 580	Alpha 700	Alpha 850	Alpha 900	Alpha 3000	Alpha 6000	Alpha SLT A33	Alpha SLT A55V	Alpha SLT A57	Alpha SLT A58	Alpha SLT A65	Alpha SLT A77	Alpha SLT A77 II	Alpha SLT A99	NEX-6	NEX-7	RX1	RX10	RX100 II	HX60V
Di866 Mark II	●	○	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	○	○	○	○	○	
Di622 Mark II	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	○	○	○	○	○	
Di700A	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Air 1 Commander	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
i40	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	

- Compatible Model
- Firmware update is required
- Firmware update is required + Use the Sony Shoe Adaptor (ADP-MAA)
- Use the Sony Shoe Adaptor (ADP-AMA)

